ALL VEHICLES

2

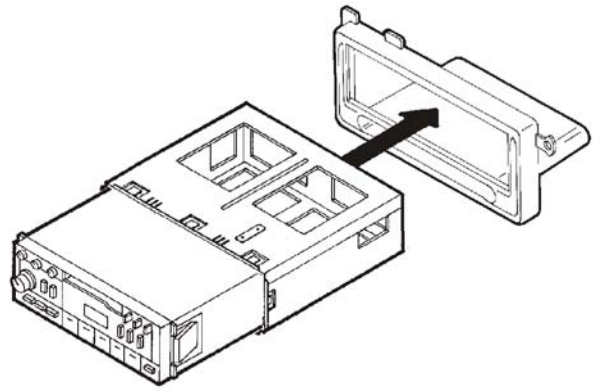

DIN HEAD UNITS: Slide the DIN cage into the kit and secure by bending the metal locking tabs down. Slide the aftermarket head unit into the cage until secure.

3

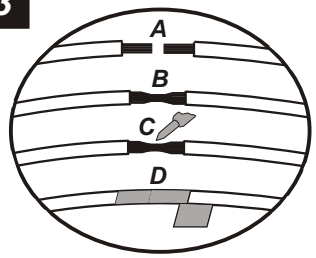

A) Strip wire ends back ½"
B) Twist ends together
C) Solder
D) Tape

Locate the factory wiring harness in the dash. Metra recommends using the proper mating adaptor and making connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit).

4

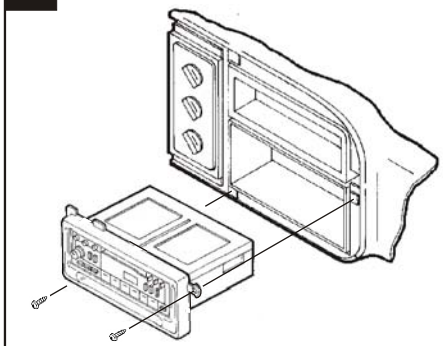

Re-connect the battery terminal and test the unit for proper operation. Mount the head unit/kit assembly to the sub-dash with those screws previously removed in step #1.

rev. 230701

KIT FEATURES

- *Pocket provisions*

KIT COMPONENTS

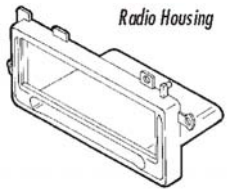

TOOLS REQUIRED

Phillips screwdriver

Cutting tool

Panel removal tool

Metra
Metra Division of METRACORP

99-6000
INSTALLATION INSTRUCTIONS

APPLICATIONS

CHRYSLER / DODGE / EAGLE / JEEP
PLYMOUTH VEHICLES 1974-00
(SEE INSIDE FOR SPECIFIC APPLICATIONS)

☎ 1-800-221-0932 💻 www.metraonline.com

© COPYRIGHT 2001 METRA ELECTRONICS CORPORATION

TABLE OF CONTENTS

CAR	PAGE
CHRYSLER	
Cirrus 1995-00	2
Concorde 1993-97	1
Cordoba 1975-78	1
Cordoba 1979-83	1
E-Class 1983-84	1
Fifth Avenue 1990-94	1
Imperial 1982-83	1
Imperial 1990-93	1
Laser 1984-85	1
LeBaron 1976-81	1
LeBaron 1982-85	1
LeBaron 1986-95	1
LeBaron GTS 1985-95	1
LHS 1993-98	1
Newport 1980-81	1
New Yorker 1980-81	1
New Yorker 1983-87	1
New Yorker 1988-96	1
Prowler 1997-02	1
Sebring 1995-00	2
Sebring (conv.) 1996-00	2
Town & Country 1990-95	1
Town & Country 1996-00	1
DODGE	
Aries 1981-89	1
Aspen 1976-80	1
Avenger 1995-00	2
Caravan 1984-90	1
Caravan 1991-95	1
Caravan 1996-00	1

CAR	PAGE
DODGE (cont.)	
Charger 1974-78	1
Charger 1983-87	1
Dakota 1987-96	1
Dakota 1997-00	1
Daytona 1984-89	1
Daytona 1990-93	1
Diplomat 1976-89	1
Durango 1997-00	1
Dynasty 1988-93	1
Intrepid 1993-97	1
Lancer 1986-89	1
Magnum XE 1978-79	1
Mirada 1979-83	1
Neon 1994-99	1
Omni 1978-82	1
Pickup 1974-80	1
Pickup 1981-93	1
Ram 1994-00	1
Ramcharger 1974-80	1
Ramcharger 1981-93	1
Rampage 1978-82	1
Shadow 1987-94	1
Spirit 1989-95	1
St. Regis 1979-81	1
Stratus 1995-00	2
Van 1978-02	1
024 1978-82	1
400 1982-83	1
600 1983-87	1

CAR	PAGE
EAGLE	
Vision 1993-97	1
JEEP	
Cherokee 1997-01	1
Grand Cherokee 1993-95	2
Grand Cherokee 1996-98	1
Wrangler 1997-02	1
PLYMOUTH	
Acclaim 1989-95	1
Breeze 1996-99	2
Caravelle 1985-88	1
Fury 1975-78	1
Gran Fury 1975-85	1
Horizon 1978-82	1
Horizon 1984-90	1
Neon 1994-99	1
Reliant 1981-89	1
Scamp 1983-84	1
Sundance 1987-94	1
TC3 1978-82	1
Trailduster 1974-80	1
Trailduster 1981	1
Turismo 1983-87	1
Van 1978-97	1
Volare 1976-80	1
Voyager 1984-90	1
Voyager 1991-95	1
Voyager 1996-00	1

THIS KIT HAS BEEN SPECIALLY DESIGNED WITH SUPPORT RIBS TO INSURE STRUCTURAL INTEGRITY DURING SHIPPING. PLEASE CUT AND REMOVE THESE RIBS FROM THE RADIO OPENING BEFORE BEGINNING YOUR INSTALLATION.

CHRYSLER/DODGE/EAGLE/JEEP/PLYMOUTH vehicles (EXCEPT Grand Cherokee 1993-95, Cirrus, Stratus, Sebring, Sebring convertible, and Avenger)

1

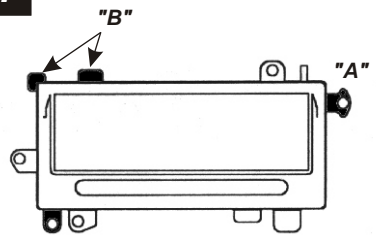

Please call Metra's Technical Support line for individual dash disassemblies.

Cut and remove all mounting tabs on the ***Radio Housing*** EXCEPT the *shaded* tabs. Cut and remove the *lower* locating pin on tab ***"A".*** (It may be necessary to trim tabs ***"B"*** for some applications). *Skip to the Installation Instructions for ALL VEHICLES on Page #3.*

CHRYSLER Cirrus 1995-00 / Sebring (convertible) 1996-00 DODGE Stratus 1995-00 / PLYMOUTH Breeze 1996-99

1

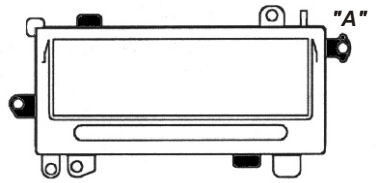

Please call Metra's Technical Support line for individual dash disassemblies.

Cut and remove all mounting tabs on the ***Radio Housing*** EXCEPT the *shaded* tabs. Cut and remove the *upper* locating pin on tab ***"A".*** *Skip to the Installation Instructions for ALL VEHICLES on Page #3.*

CHRYSLER Sebring 1995-00 / DODGE Avenger 1995-00

1

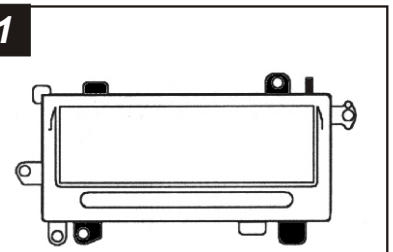

Please call Metra's Technical Support line for individual dash disassemblies.

Cut and remove all mounting tabs on the ***Radio Housing*** EXCEPT the *shaded* tabs. *Skip to the Installation Instructions for ALL VEHICLES on Page #3.*

JEEP Grand Cherokee 1993-95

1

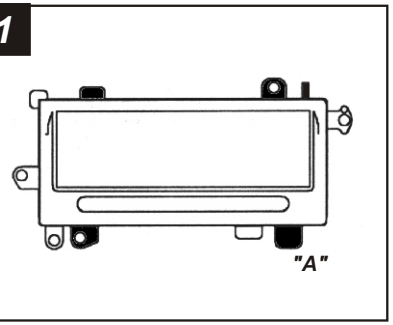

Please call Metra's Technical Support line for individual dash disassemblies.

Cut and remove all mounting tabs on the ***Radio Housing*** EXCEPT the *shaded* tabs. Cut tab ***"A"*** along the scored line and remove the bottom portion of the tab. *Skip to the Installation Instructions for ALL VEHICLES on Page #3.*